



1330 Grandview Blvd.  
 Apt. 2216  
 Huntsville, AL 35824  
 (256) 258-9886  
 asitekman.com

# Hold Button Compatibility List

Last Changed: July 14, 2021 Approved: Alan Sandige

If your phone is not on this list, use the AD-30 alone. The AD-30 works on ALL phones.

## Phones using the AD-30 and AD-30-A1

Maker	Model
AT&T/Lucent	1040

Maker	Model
AT&T/Lucent	1070

Maker	Model
AT&T/Lucent	1080

## Phones using the AD-30 and AD-30-A2

Maker	Model
AT&T/Lucent	SB67118

Maker	Model
AT&T/Lucent	SB67138

Maker	Model
AT&T/Lucent	SB67158

## Phones using the AD-30 and AD-30-P1

Maker	Model
Panasonic	KX-TS4000

Maker	Model
Panasonic	KX-TS4500

## Phones using the AD-30 and AD-30-P2

Maker	Model
Panasonic	KX-TS4100

Maker	Model
Panasonic	KX-TS4200

Maker	Model
Panasonic	KX-TX4300

## Phones using the AD-30 and AD-30-P3

Maker	Model
Panasonic	KX-TG9541

Maker	Model

## Phones using the AD-30 and AD-30-P4

Maker	Model
Panasonic	KX-TG9471

Maker	Model

## RCA Phones that work with the AD-30 Hold Button mode, NOTE: They BEEP on hold

Maker	Model
GE	25403
GE	25404
RCA	25403
RCA	25404
RCA	25413

Maker	Model
RCA	25414
RCA	25415
RCA	25420
RCA	25423
RCA	25424

Maker	Model
RCA	25425
RCA	H5400
RCA	H5401